



DWG. NO. NA5-A19LRC
 MODEL A5GALRC L.H. CONTROL LABELER
 FEED END COLUMN SUPPORT ASSY.

MODEL A5GALRC L.H. CONTROL LABELER FEED END COLUMN SUPPORT ASSEMBLY
 DWG. NO. NA5-A19LRC

ITEM NO.	PART NO.	DESCRIPTION
1	NAL-546L	DIAMETER ADJUSTMENT CHAIN
2	NA-W536D	CHAIN TAKE-UP BRACKET WELDMENT
3	NA5-517	DIAMETER ADJUSTING SCREW
4	NAL-1999RC	HEIGHT ADJUST SHAFT SUPPORT
5	NLE-56	COLUMN COVER PLATE
6	NA5-A52D	CARRIER FRAME SUPPORT ASSEMBLY
7	NLE-518R	DIAMETER ADJUST SCREW SLEEVE-R.H.
8	NLE-565	BRONZE BUSHING
9	NAL-1901	DIAMETER SCREW SLEEVE MOUNT
10	NAL-1902	DIAMETER SCREW SLEEVE SUPPORT
11	NA5-1908	DIAMETER ADJUST STOP PLATE
12	NAL-1909	DIAMETER ADJUST STOP BLOCK
13	NAL-110	SUPPORT TUBE
14	NAL-1991L	FEED END TUBE SUPPORT
15	NMC-149	FLANGE BUSHING
16	NLE-522	DIAMETER ADJUST BEVEL PINION
17	NAL-1906	DIAMETER ADJUST GEAR COVER
18	FP-HN08F	PLATED HEX NUT
19	NLE-453	HEIGHT ADJUST STUD WASHER
20	NLE-521	DIAMETER ADJUST BEVEL GEAR
21	NAL-1904	THRUST ADJUST NUT MOUNT
22	NLE-519	THRUST ADJUST NUT
23	NAL-1905	DIAMETER ADJUST SCREW FILLER
24	NAL-1903	DIAMETER ADJUST GEAR SUPPORT
25	NAL-10AL	REAR SIDE PLATE
26	NAL-530	DIAMETER ADJUST BEARING SUPPORT
27	NLE-535	DIAMETER ADJUST SPROCKET
28	NLE-454	HEIGHT ADJUST TAKE-UP ROLLER
29	NAL-561	SUPPORT SHIELD
30	NA5-557RC	COUNTER DRIVE SHAFT
31	NLE-BS8F	BEARING
32	NLEB-46	BOOSTER DRIVE CAP
33	NLE-5105	DRIVE GEAR FILLER
34	NAL-5341R	DRIVE SHAFT SCREW-R.H.
35	NAL-523	DIAMETER ADJUST DRIVE SHAFT
36	NLE-2251	BRONZE BUSHING
37	NLE-524	ADJUST HANDWHEEL
38	NAL-1907	DIAMETER ADJUST SHAFT SUPPORT
39	NLE-5303	OVERHEAD CARRIER ARM KEY
40	NLE-560HD	OVERHEAD CARRIER BAR - HD
41	NLE-559F	OVERHEAD CARRIER ARM - F.E.
42	NLE-5334	CARRIER ARM CAP - FEED END
43	NA5-564	DIAMETER GAUGE MOUNT ANGLE
44	NLE-A562	DIAMETER GAUGE
45	NA5-16	FEED END PLATE

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
 AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
 P.O. BOX 467 210 BLETTNER AVENUE
 HANOVER, PA. 17331
 TEL. (717) 637-2133 OR 637-8998
 FAX. (717) 637-2966 WEB SITE: www.labeler.com

MODEL ASGALRC L.H. CONTROL LABELER FEED END COLUMN SUPPORT ASSEMBLY
DWG. NO. NA5-A19LRC

ITEM NO.	PART NO.	DESCRIPTION
46	NA5-1993	FEED END PLATE BRACE
47	NAL-1931	GUM POT RACK SUPPORT
48	NAL-10L	MAIN FRAME PLATE
49	NAL-1952	LEG MOUNT BLOCK
50	NAL-1951	LEG MOUNT BLOCK
51	NAL-1950F	LEG - FEED END
52	NAL-W1953LR	LEG EXTENSION WELDMENT
53	NAL-W1953LL	LEG EXTENSION WELDMENT
54	NAL-575	DRIVE SHAFT BEARING SPACER
55	NAL-574	DRIVE SHAFT BEARING SUPPORT

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
P.O. BOX 467 210 BLETTNER AVENUE
HANDOVER, PA. 17331
TEL. (717) 637-2133 OR 637-8998
FAX. (717) 637-2966 WEB SITE: www.labeler.com