



MODEL E5/E7/EP LABELER INFEED END COLUMN SUPPORT ASSEMBLY

DWG. NO. NLE-A19

ITEM NO.	PART NO.	DESCRIPTION
1	NLE-A52	CARRIER COLUMN ASSEMBLY - F.E.
2	NLE-518R	DIAMETER ADJUST SCREW SLEEVE - F.E. - R.H.
3	NLE-56	COLUMN COVER PLATE
4	NLE-BS8F	BEARING
5	NLE-5341	COUNTER DRIVE SHAFT SCREW
6	NLE-5105	DRIVE GEAR FILLER
7	NLE-565	BRONZE BUSHING
8	NLE-537	REAR MAIN COLUMN GUARD
9	NLE-19	REAR MAIN COLUMN - F.E.
10	NLE-18	COLUMN COVER PLATE
11	NLE-517R	DIAMETER ADJUST SCREW - F.E. - R.H.
12	NLE-124	COLUMN COVER PLATE
13	NLE-521	DIAMETER ADJUST BEVEL GEAR
14	F-WK07	WOODRUFF KEY
15	NLE-519	THRUST ADJUST NUT
16	FP-HN08F	PLATED HEX NUT
17	NLE-522	DIAMETER ADJUST BEVEL GEAR
18	F-WK11	WOODRUFF KEY
19	NLE-532	BEARING RETAINER BUSHING
20	NLE-DS147	OIL SEAL
21	NLE-528	INTERMEDIATE ADJUST SHAFT - F.E.
22	NLE-453	ADJUST WASHER
23	F-WK09	WOODRUFF KEY
24	NLE-525	DIAMETER ADJUST SHAFT
25	NLE-533	BEARING RETAINER BUSHING
26	NAL-561	SUPPORT SHIELD
27	NLE-557A	COUNTER DRIVE SHAFT - F.E.
28	NLE-5201	SPACER DRIVE HOUSING
29	NLE-126	COLUMN CLAMP BUSHING
30	NLE-5303	OVERHEAD CARRIER ARM KEY
31	NLE-560	OVERHEAD CARRIER BAR
32	NLE-559F	OVERHEAD CARRIER ARM - F.E.
33	NLE-5334	CARRIER ARM CAP - F.E.
34	NLE-A562	DIAMETER GAUGE
35	NLE-563	DIAMETER GAUGE BRACKET
36	NLE-155	SUPPORT BRACKET
37	NLE-W111	COLUMN CROSS TIE ROD
38	NLE-535	DIAMETER ADJUST SPROCKET
39	NLE-A530	DIA. ADJ. BEARING SUPPORT ASSY. (INCLUDES ITEM #41)
40	NLE-524	ADJUST HANDWHEEL
41	NL-550	BRONZE BUSHING
42	NLE-523	DIAMETER ADJUST DRIVE SHAFT
43	NLE-16	FRONT MAIN COLUMN - F.E.
44	NLE-546	DIAMETER ADJUSTMENT CHAIN

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
P.O. BOX 467 210 BLETTNER AVENUE
HANDOVER, PA. 17331
TEL. (717) 637-2133 OR 637-8998
FAX. (717) 637-2966 WEB SITE: www.labeler.com